




Thread pitch: M10x1.5  
Weight: 160 grams  
Made in the USA  
rpsdzn.com

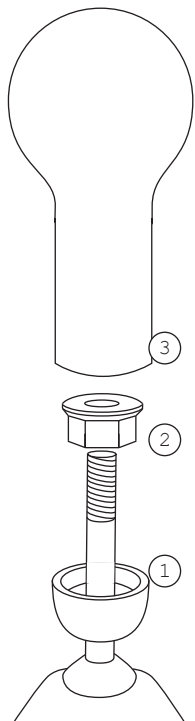

3 Loosely thread the shift knob onto the lever to the height that you prefer

2 Loosely thread the stainless steel M10x1.5 locking nut over the shift lever to the bottom of the lever's threads

1 Put the cover slip over the shift lever

5 Push the cover slip over the locking nut, until it is flush with the shift knob

4 Use a wrench to tighten the locking nut against the shift knob. Do not over-tighten!